



MODEL

## DECO 248 Accent Table / 2041 Laptop Cart

ASSEMBLY INSTRUCTIONS			
PART ID	)	DESCRIPTION	QUANTITY
A		Lock Washer	2
B		Long Silver Buttonhead Bolts	2
C		Allen Wrench	1

Secure steel frame to glass table top by screwing in Lock Washer (A) and Short Buttonhead Screws (B) into disc that is attached to glass plate.

## NOTE:

MAKE SURE THE GLASS TOP IS STRAIGHT BEFORE TIGHTENING THE MOUNTING BOLTS ON THE BOTTOM.